Clarkson Craftsman House 1:24 scale assembly Instruction by Laser Dollhouse Designs



NOTE 1: Please do a dry assembly only using tape to hold house together. This will get you familiar with parts, location, and fit. This also gives you a chance to visualize how you want to approach the build. Also read each step and adhere to items that should not be glued till a later time..

Materials for build;

- 1. Wood glue, you may use Titebond, Elmers, tacky or any good wood glue. Tacky wood glue dries clear and is preferred.
- 2. Masking tape to hold house in place during dry assembly and gluing.
- 3. Utility knife if needed for trimming.
- 4. 220 grit sandpaper.
- 5. Wood Filler
- 6. Paint, any acrylic paint.



Step 1. Complete dry assembly, next paint all parts and fit to house without painting to assure proper fit with paint.

Step 2. Locate base as seen in figure 1.

Step 3. Install interior walls and side exterior walls, each wall on the tab is listed to location on base. Match wall 1A to location on base 1A and so on. Figure 2. Next install 2nd floor onto first floor walls BUT DO NOT GLUE!! Weight down and allow glue to dry, figure 3.



Figure 3



Figure 1



Figure 2

Step 4. Remove 2nd floor and install interior doors and frames, doors should open into the rooms and not hallway, Figure 4. Next paint front main door, figure 5. Assemble main door, figure 6.

Step 5. Install porch post, main door, and front window, figure 7



Figure 4



Figure 5



Figure 6



Figure 7

Step 6. Remove protective cover from glass and install into back of window, figure 8. Next install interior window frame, figure 9.

Step 7. Install and glue 2nd floor down to the first floor walls, figure 10. Next install right front main wall after installing windows, figure 11. weight 2nd floor down and allow glue to dry.





Figure 10

Figure 11



Figure 8



Figure 9

Step 9. locate the landing handrail assemblies and 3 posts seen in figure 12. Next paint and install hand and foot rails to spindle string, figure 13.

Step 10. Locate staircase assemble as seen in figure 14.

Step 11. Install handrail to staircase spindle string as seen in figure 15. Next install treads with holes on the left side as seen in figure 16.

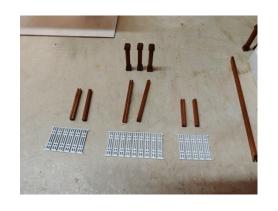


Figure 12



Figure 13








Figure 14 Figure 15 Figure 16

Step 12. Install the handrail assemble into the treads as seen in figure 18. Next install the two staircase posts as seen in figure 19.



Step 14. Install front wall roof supports, figure 21. Next install the roof panel, figure 22.



Figure 18



Figure 19



Figure 20



Figure 21



Figure 22

Step 15. Install side front wall roof panel base and three supports as seen in figure 23. Next install the front right side main roof panel, figure 24. Next install roof panel on right side front wall, figure 25.

Step 16. Install rear wall as seen in figure 26.



Figure 25



Figure 26



Figure 23



Figure 24

Step 17. Install interior wall onto second floor, figure 27. Next install right main rear roof panel as seen in figure 28. Clamp wall to roof panel.

Step 18. Install exterior dormer walls onto roof panel as seen in figure 29. Next install window and front dormer wall as seen in figure 30.





Figure 29

Figure 30



Figure 27

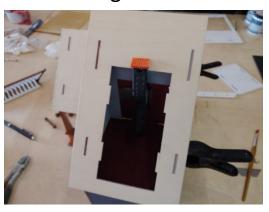


Figure 28

Step 19. Install dormer roof panel, figure 31. Next install window knee wall, figure 32 and window base floor, figure 33.

Step 20. Install interior double door, figure 34.



Figure 31



Figure 32



Figure 33



Figure 34

Step 21. Install knee side triangle wall as seen in figure 35. Next install front knee wall as seen in figure 36.

Step 22. Install the staircase, figure 37. Install landing raining and post, figure 38.



Figure 35



Figure 36





Figure 37 Figure 38

Step 23. Install right main roof panel as seen in figure 39. Step 24. Next install dormer side wall panels as seen in figure 40. Next install window in to front dormer wall and interior frame, install dormer front wall panel, figure 41.

Step 25. Install mid-roof panel and dormer main roof panels as seen in figure 42. Now install interior knee wall and window base floor, figure 43. House assembly complete.



Figure 39



Figure 40







Figure 41 Figure 42 Figure 43

Shingle install pattern

Step 1. Shingles not included in kit, purchase our asphalt shingles at www.laserdollhouses.com you will require 2 bags to complete house.

Install mid-roof shingles. To install shingles you may use wood glue or super glue. If using super glue wear thin rubber gloves to protect hands. Take a strip and lay upside down even to bottom edge, once on press each shingle down firmly to seat, figure 1. Next trim excess with a utility knife, make sure blade is new for clean easy cuts.



Figure 1

Step 2. Install next row of shingles by aligning each shingle square center to the slit of the lower shingle, figure 2.



Figure 2

Garage Assembly continued

Step 3. Continue with next row aligning next shingle row with top of the shingle cutout dividers, figure 3. Follow same process for remaining install to complete house, fig. 4.











Laser Dollhouse Designs

Website: www.laserdollhouses.com

Email: lfricke@laserdollhouses.com