Terri Cottage Instructions By Laser Dollhouse Designs



Parts for assembly





Second floor / Loft



Ceiling floor support





2nd Floor Window frames

Skylight Window frames





 1^{st} Floor walls 1A and 1B



2nd Floor walls 2A and 2B



3rd Floor support rails 3A thru 3C



3rd floor window frames



Right side fence assembly



Ladder



Loft rails



Entry Door assembly




First Floor window frames With flower box



Left side fence assembly



Roof panels



Step 1. Locate and install window frames with flower boxes To the outside wall of 1A, see figure 1

Step 2. Take the plexiglas and insert into opening in wall 1A, see figure 2 (note: make sure that you use the larger two rectangle plexiglas as they are similar in size to the cutouts for the skylight.)

Step 3. Install interior window frames again making sure they are the left over larger two as they are similar in size to the skylight frames.

Figure 2A









Step 4. Install entry door assembly to opening in wall 1A. See figure 3





Step 5. Install interior door frame. See figure 3A

Step 6. Install outer window frame on wall 2A. See figure 4







Step 7. Install plexiglas into opening in wall 2A. See figure 4A.

Figure 4A



Step9. Install outer skylight frames to left roof panel. See figure 5.



Figure 4B




Step10. Install plexiglas. See figure 5A.

Step11. Install interior skylight frames. See figure 5B.

Step12. Install walls 1A and 1B to the base floor. See figure 6.



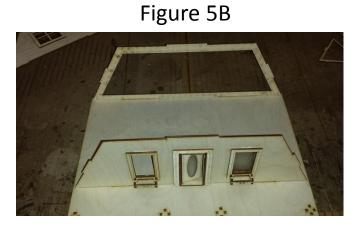



Step13. Install 2nd floor / loft floor. See figure 7.



Figure 7



Figure 8



Figure 9

Step14. Install ladder and rails to second floor. See figure 8.

Step15. install walls 2A and 2B. See figure 9.

Step16. Install 3rd floor/ roof support on top of wall 2A and 2B. See figure 10.







Step17. Install left roof panel by aligning panel slots to tab on walls 1A/1B, 2A/2B. This will help stabilize the build. See figure 11.

Figure 11

Step18. Install roof upper support frames 3A, 3B and 3C. See figure 12.



Step19. Install right roof panel. See figure 13.



Figure 13








Step20. Install upper outer window frame to 3A and 3C. See figure 14.

Figure 14

Step21. Install triangle plexiglas from the inside to frame 3A and 3C. See figure 15.

Step22. Install triangle inner frames from the inside to frame 3A and 3C. See figure 16.







Step23. locate post and fence labeled LF for "left fence" and connect them together do this for the right fence as well . See figure 17.

Figure 17

Step24. You should now have two fence assemblies as seen in figure 18.



Step24. install the two fence assemblies as seen in figure 18.



Figure 19

The Terri Cottage is now completed. Time for some decorating!!!



Laser Dollhouse Designs <u>www.laserdollhouses.com</u> Email: laserdollhouses@aol.com