


## Victorian Farmhouse assembly instructions By Laser Dollhouse Designs

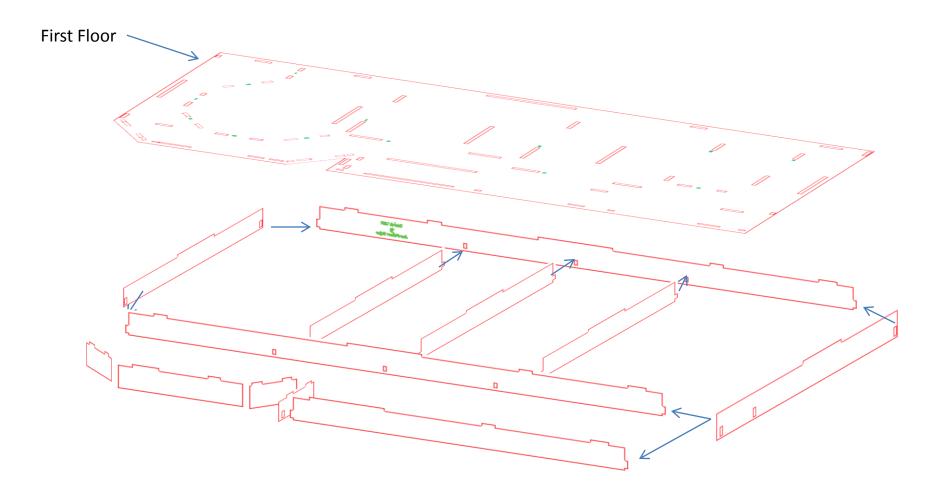

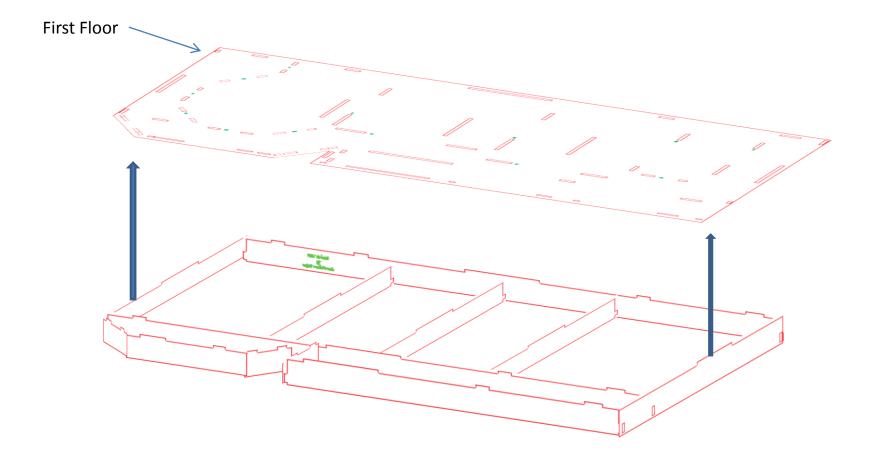


Lay first floor upside down and assemble base supports by inserting into first floor slots. Once installed turn right side up. You should see the numbers 1A thru 1P for inserting the walls.




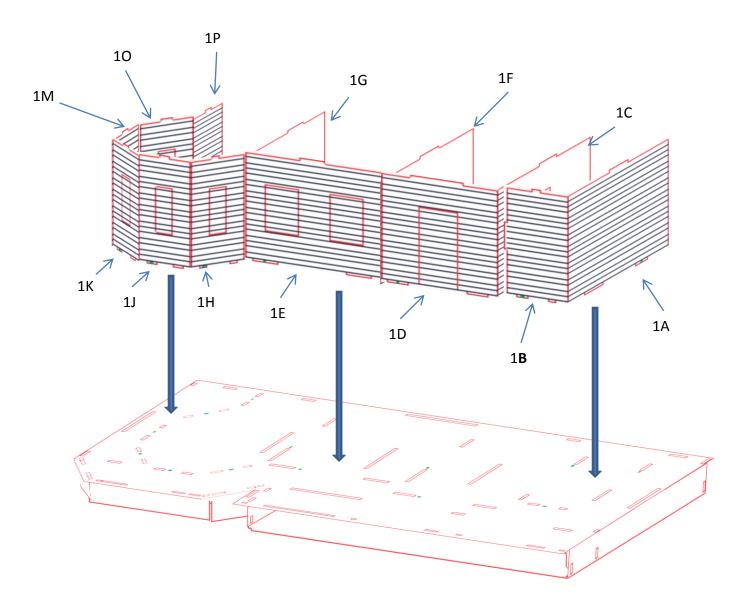



Insert walls 1A thru 1P, match the wall tabs to first floor slots.

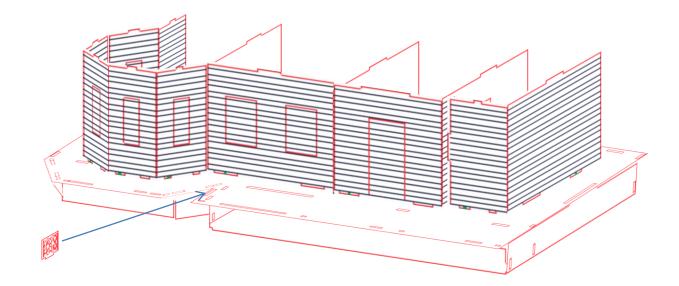


Insert the small porch side frame.

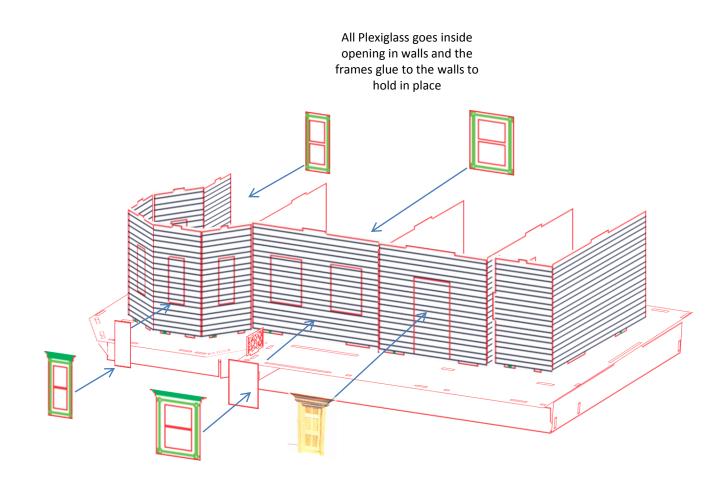


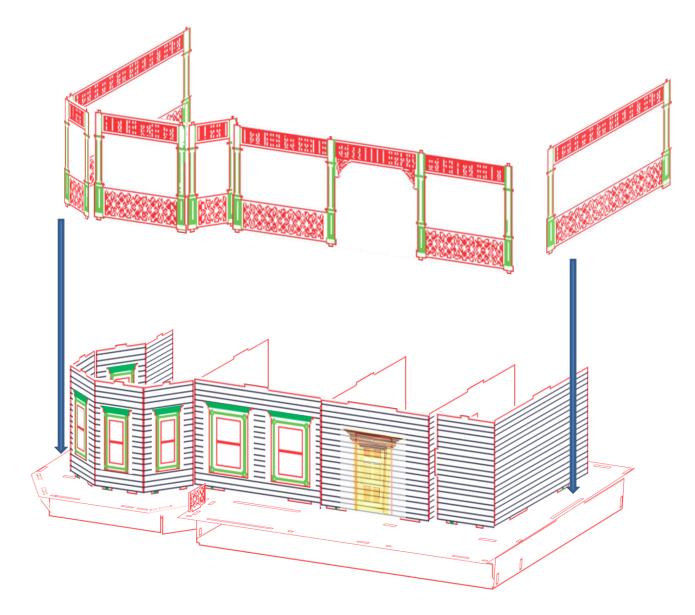


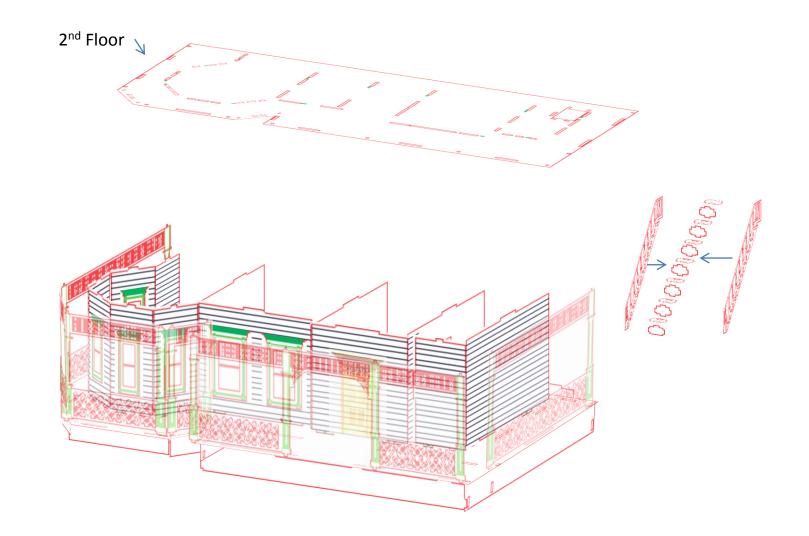


Assemble stairs and install prior to placing the 2<sup>nd</sup> floor on as this will prevent you from inserting stairs later.

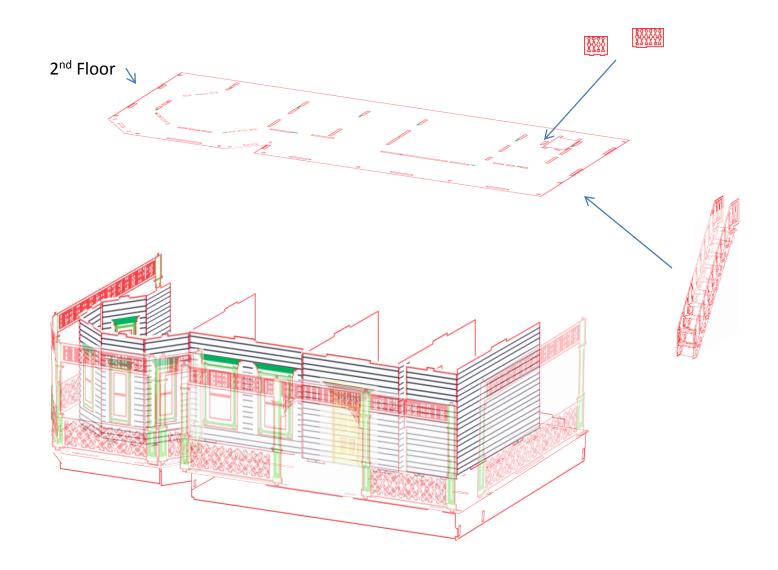

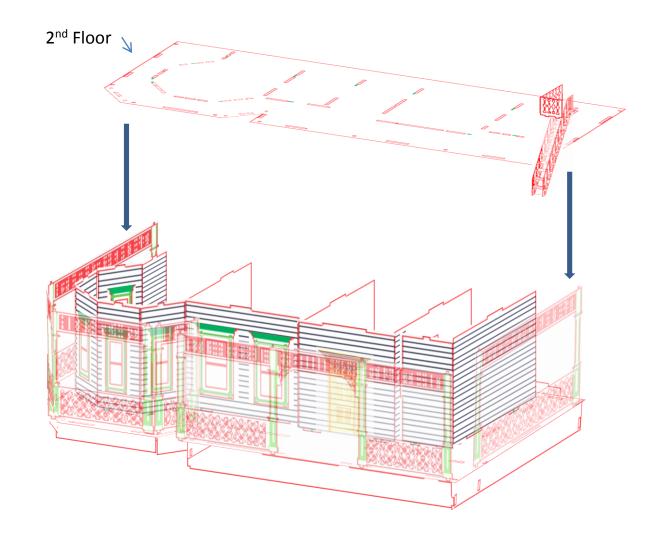


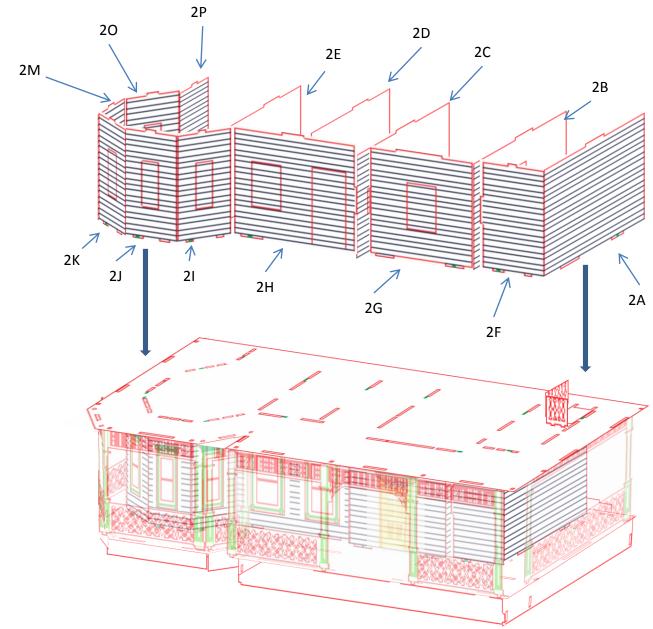


Locate walls 2A thru 2P. Note there is no 2L or 2N.

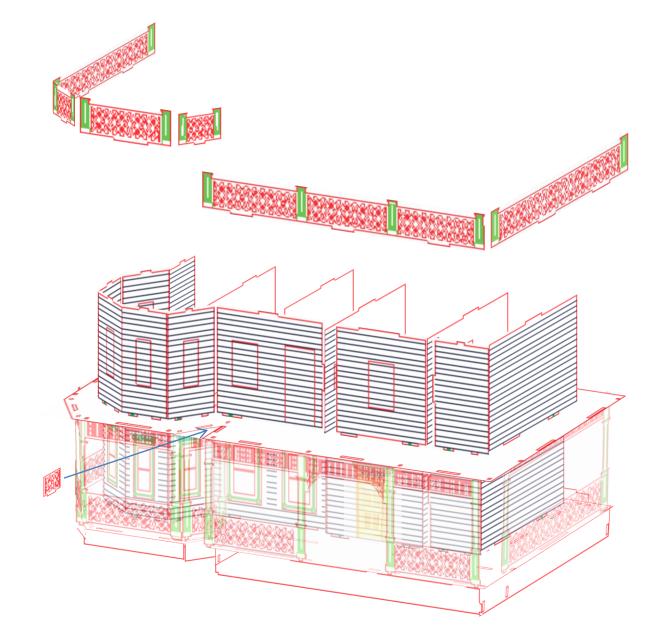


Insert 2<sup>nd</sup> floor porch rails.

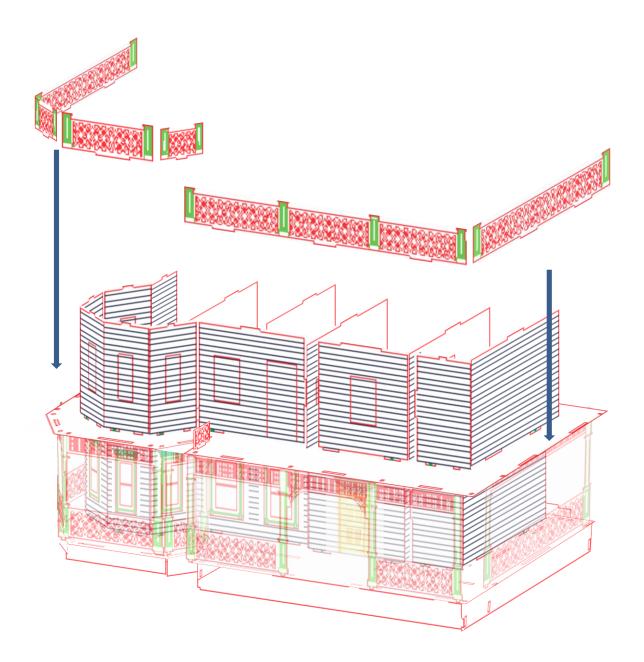


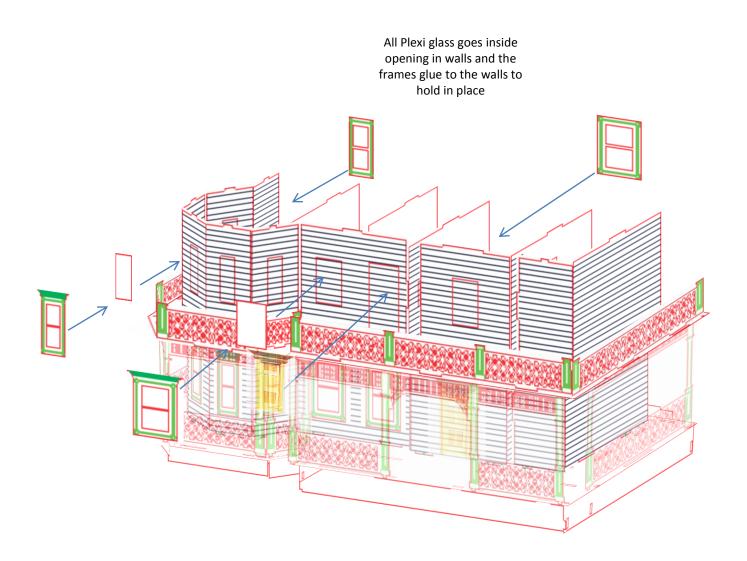




Assemble stairs and follow same process as earlier for 2<sup>nd</sup> floor.

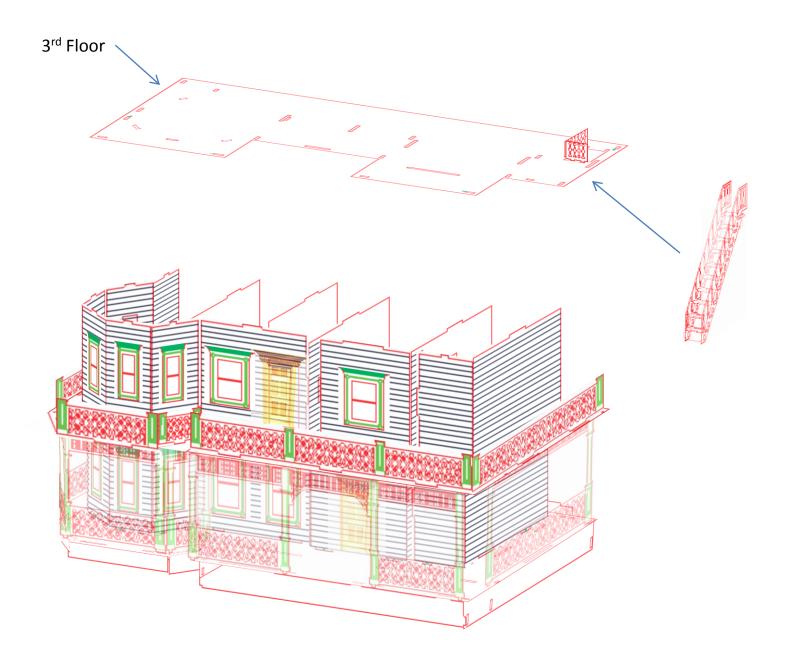

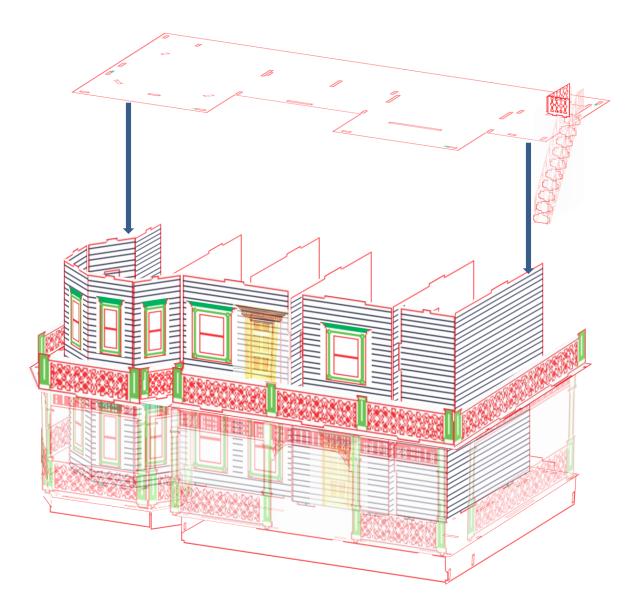





Ok  $2^{ND}$  Floor complete. On to the  $3^{rd}$ .

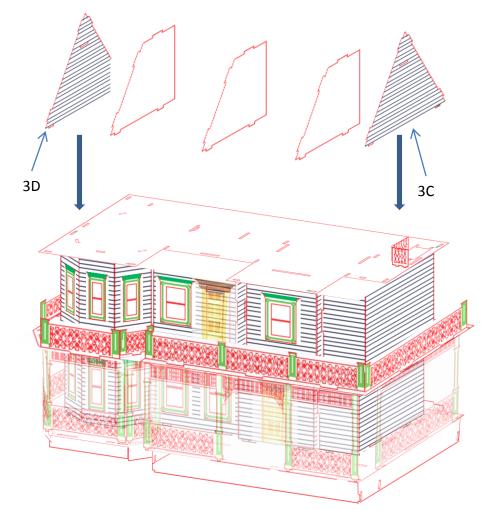


Install wall 3A and 3D along with the 3 dividers in the middle.

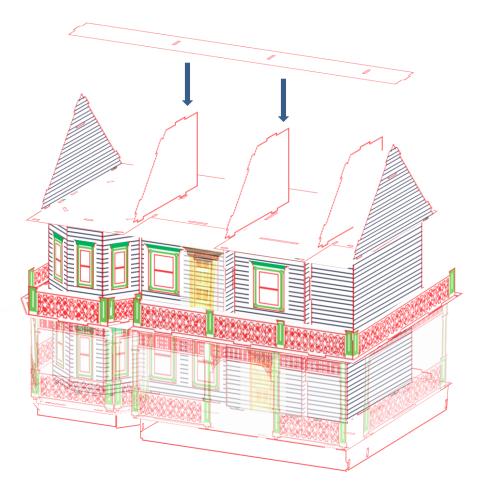

Install 3<sup>rd</sup> floor roof. Note that the top back goes facing up and to the rear for proper alignment.

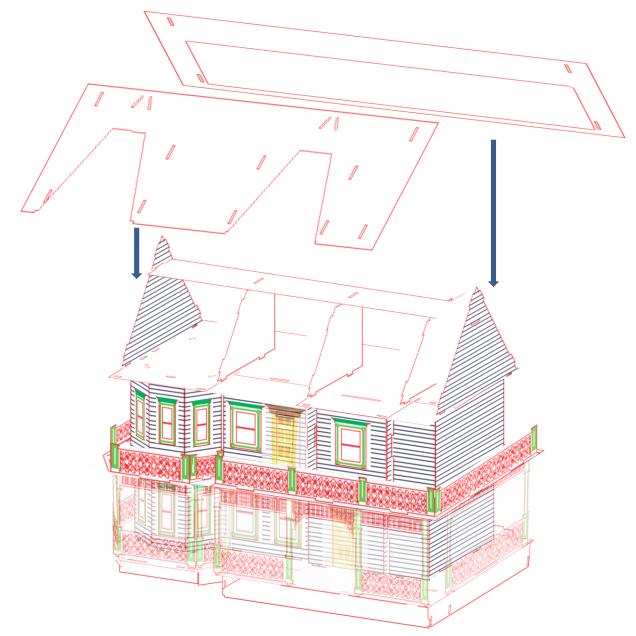


Install front and rear roof panels.

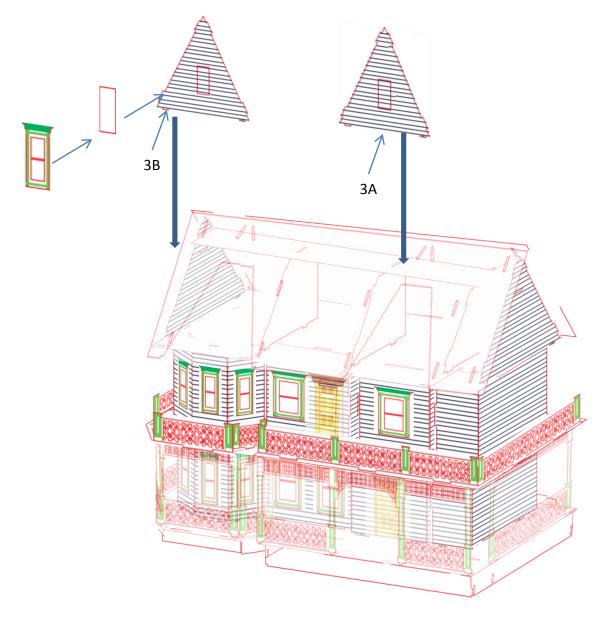

Install walls 3A and 3B.





Install front alcove roof panels.

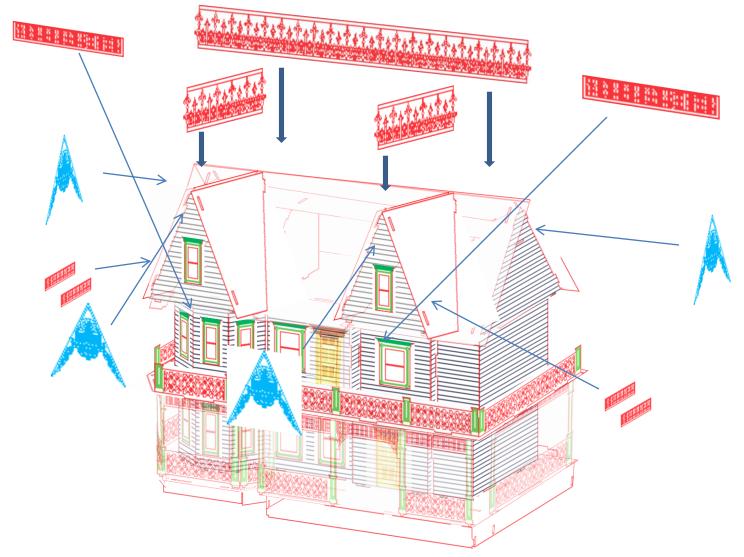



Install roof running rails and front facing fretwork.



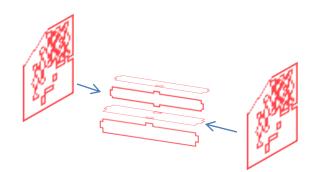

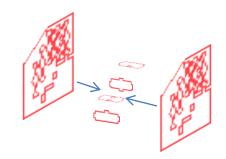

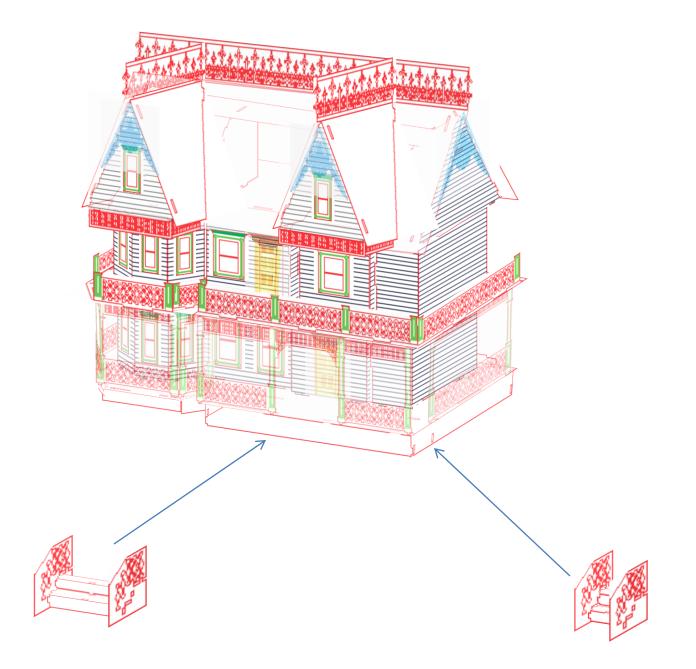

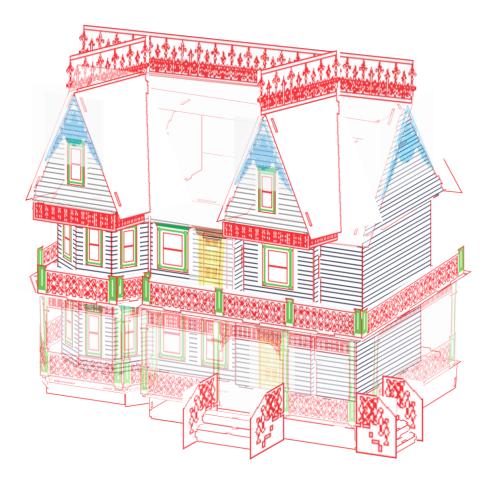

With the steps in we are now complete with the Victorian Farmhouse. Congratulations and Thank you for your support. Laser Dollhouse Designs. <u>www.laserdollhouses.com</u> laserdollhouses@aol.com